


Technology Instructions: Document Camera

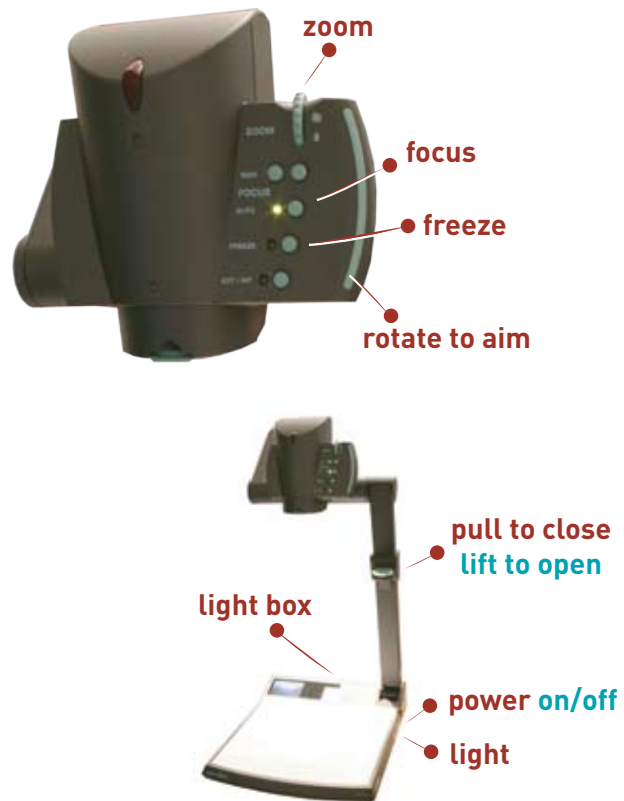

Set Up

1. Press Doc Cam (**Document Camera**) Button on podium control panel for left or right projector. (Wait 20 seconds for projector to turn on).
2. Pull **Document Camera** from drawer.
3. Lift and straighten the camera arm by pulling upwards on the Wolfvision handle. **The Document Camera** should automatically turn on.

Please turn off Document Camera
After Usage

Document Camera

1. The camera and light turns on automatically when the arm is raised. Press the **POWER** button to turn it on or off again.
2. Light the overhead bulb by repeatedly pressing the **LIGHT** button.
3. Push upwards on the **ZOOM** button to zoom the **Document Camera** out.
4. Grasp and rotate the head of the **Document Camera** to aim it at your object.
5. The **Document Camera** auto-focuses very well (green light indicates auto-focus is on), but there are also manual focus buttons.

Freeze: You can freeze the image being projected by pressing the **FREEZE** button.